



67—415 Remove and install electric window lifter at rear quarter window (coupe)

Remove


- 1 Remove rear quarter trim panel (68—456).
- 2 Push rocker switch out of trim panel and separate.

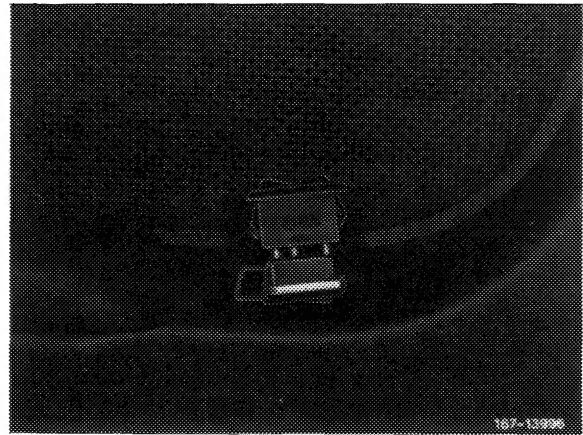


- 3 Disconnect electric connections at cable connector.

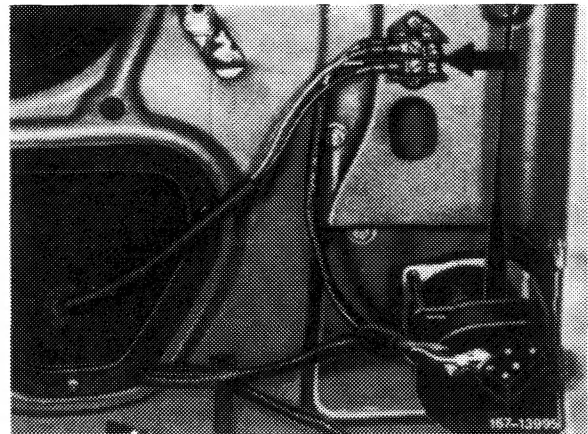


- 4 Remove both covers from the access openings.

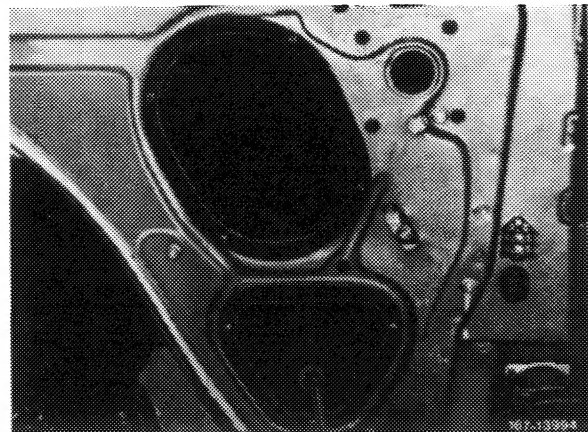


5 Unscrew screws at the shell cover.

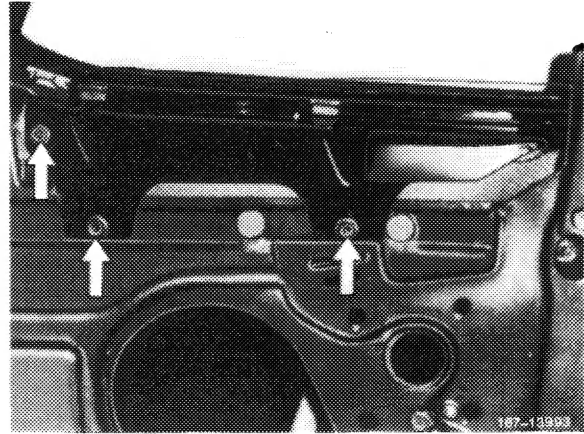


6 Unscrew screw at the front of the box-type column and remove shell cover.

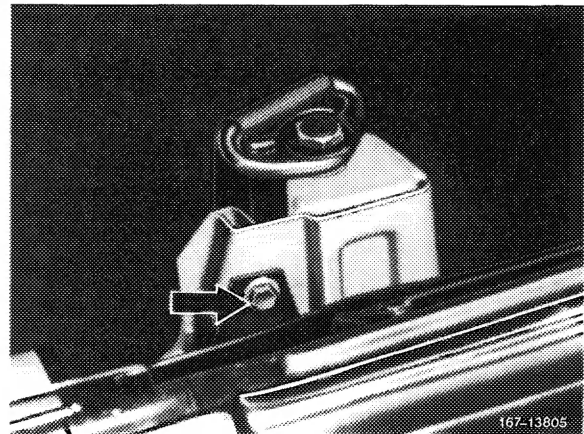


7 Remove lock at intermediate lever of window lifter and disconnect intermediate lever at the guide plate.

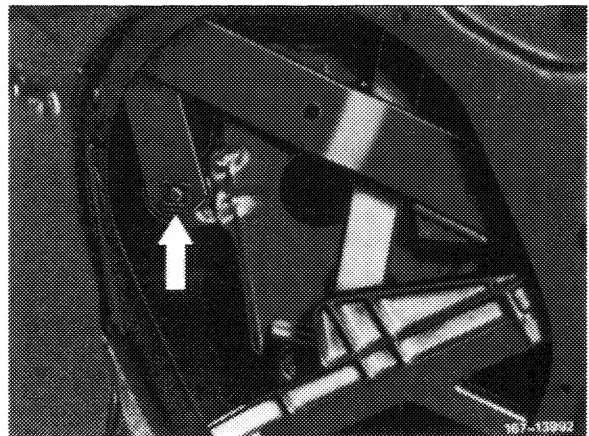

8 Remove nuts at the window lifter.

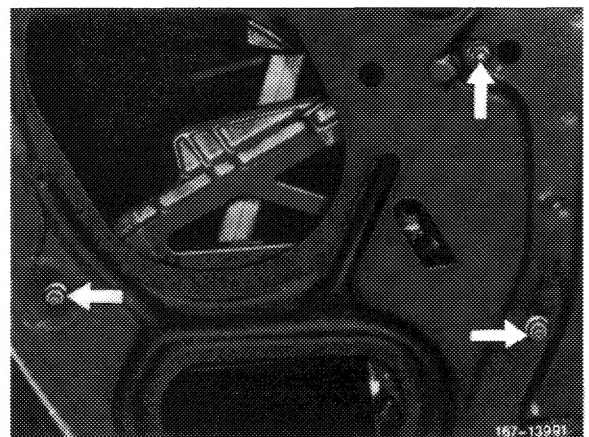

9 Push quarter window down and lift window lifter up and remove.

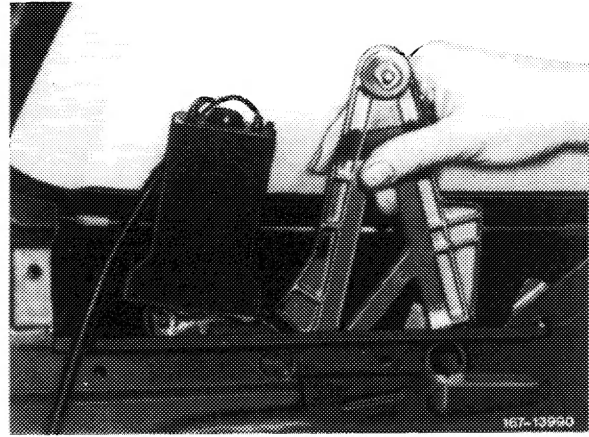

Install

10 Installation takes place in reverse order.